UKVANRACKING.CO.UK

EC102 VAN SHELVING ASSEMBLY INSTRUCTIONS

Thank you for selecting a shelving system from ukvanracking.co.uk

Enclosed with your kit you will find all the components you will need to assemble the unit.

Should you have any questions or feedback relating to our products, please contact us on 01254 669 558.

IMPORTANT NOTES

- Please check the contents of you Shelving kit carefully against the contents list supplied. If you find any shortages, please contact us immediately.
- We recommend that all the marked screw holes are pre-drilled prior to screwing and that the drill
 ratchet is set to a low resistance to avoid the wood panels splitting during assembly.
- For fast assembly we recommend a Drill Driver, Small Drill Bit (2mm) and PZ2 Pozi Drive Bit.


COMPONENTS


- (A) Shelf End Panel
- (B) Shelf End Panel
- (C) Shelf Back x 4
- (D) Shelf Base x 4
- (E) Floor Base Lip x 1

Fitting Pack: 52 x Flanged Screws

ASSEMBLY

- Select a Shelf Back (C) and slot a Shelf Base (D) into it. Pre-drill and screw the Shelf Back to the Shelf Base using the ¾" screws. Repeat until the Shelf Bases and Shelf Backs are joined. Pic 1 & 2
- Select one End Panel (A or B) and slot a combined Shelf Base and Back (C and D) into it. Predrill and screw the shelf to the end panel using the ¾" screws. Repeat until the shelf bases are joined to the end panel. *Pic 3 & 4*
- Using the remaining End Panel slot the shelves into it. You may find it easier to turn the shelving system on its side, so all the shelves are standing vertical. Pre-drill and screw the End Panel to the Shelves using the 3/4" screws. **Pic 5 & 6**
- If required place the Floor Base Lip (E) into place lining them up with the End Panels (A and B). Pre-drill and screw the panel. The Floor Base Lip is not required for structural purposes and may be omitted.

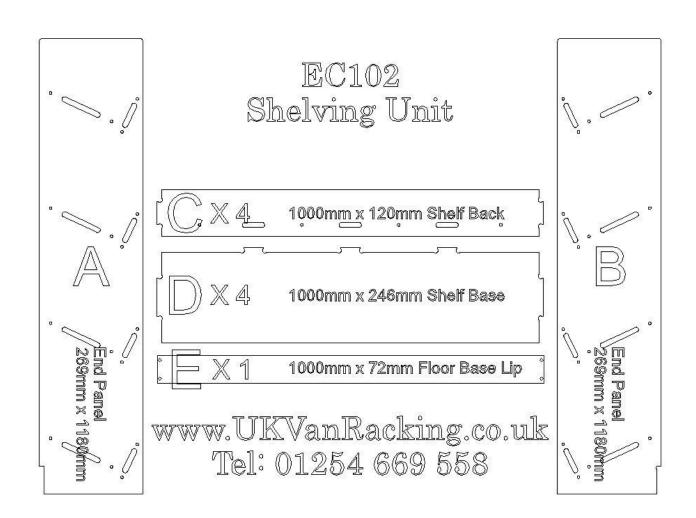

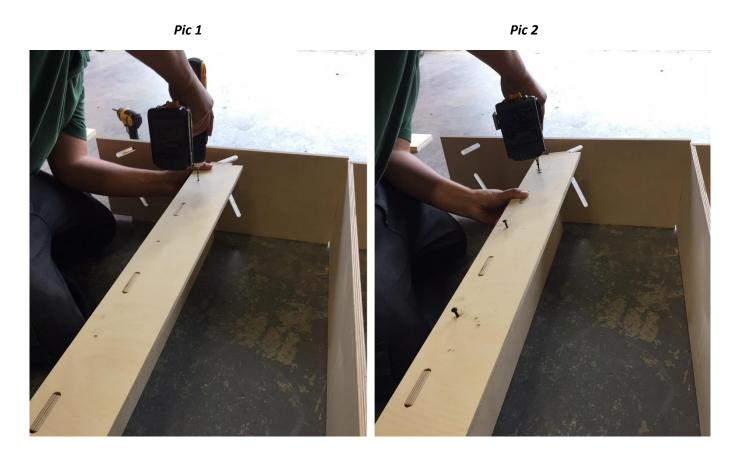

Pic 3 Pic 4





Pic 5 Pic 6



